How to use the Protector Vehicle Interlock



First, connect the black cable to your ALCOLIMIT Protector handset.

'i9' will appear on the display

indicating the handset is


correctly attached.



2 Place your key in the ignition to the ON position



Turn your ALCOLIMIT Protector on, depress the ON/OFF button for 2 seconds until the screen turns on. The unit will commence a start up process. This process generally takes 30 seconds but can last 2 minutes.

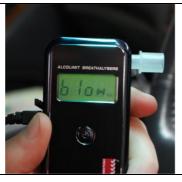

The unit is ready when two beeps sound and the word

appears on the


display



Attach the mouthpiece tube and blow one consistent deep breath into the sensor. There will be a continual long beep while you are blowing. A full lung of air is required.
Once your ALCOLIMIT Protector has received enough airflow you will hear a double click



A zero will scroll across the screen while it's analysing. Your %BAC will then be displayed. Eg. 0.045%BAC

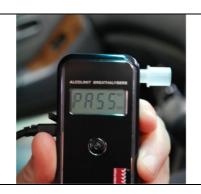



9 For readings of 0.020%BAC and above the reading will simply appear and you will NOT be able to start your vehicle.

Please wait and retest in 1 hour time.